



Software: **BAS+**  
**User Instructions**

## ENGLISH

### GENERAL

The lock operates with a six-digit code or a word with 6 letters. A secondary code can be added. Each key press is confirmed with an audio and light signal. After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already started code entry is cancelled.

#### Manipulation protection:

Entry of four consecutive invalid codes - keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes restarts the 5 minute blocking period

#### Safety reference:

All codes are to be securely stored. Do not use personal data (i.e. birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the ePASS.

### To open:

Enter code (factory code = 1-2-3-4-5-6), turn knob and open. If not opened within 3 seconds, ePASS secures automatically.

#### Locking:

Close door and turn knob fully to closing position. The lock is secured.

### Change code: (with door open)

**Press and hold Key [0]** until double signal. The light remains on during the following actions.

1. Enter old code (double signal)
2. Enter new code (double signal) and repeat new code (double signal)

In a case of entry errors (long signal), the old code remains valid.

### Activate the second opening code:

**Press and hold Key [1]** until double signal. The light remains on during the following action

1. Enter main code
2. Enter secondary code twice (Double signal after each)

*(The secondary code can be changed like the main code. With the main code, the secondary code can be deleted. The main code cannot be deleted.)*

### Delete the secondary code:

**Press and hold Key [3]** until double signal. The light remains on during the following action

1. Enter main code
- The secondary code is deleted.

### To program Time Delay (max. 99 min) and Open period (max.19 min)

**Press and hold key [9]** until double signal. The light remains on during the following action

1. Enter six-digits main code (double beep if valid)
2. Enter time delay and open window two digits values (double beep)  
i.e. if you want to program 26 minutes delay and 12 minutes open window, enter:"2612"
3. Enter time delay and open window two digits values again to confirm (double beep if valid operation)

**Attention:** If you changes values during time delay, the time delay value may only be increased. Smaller values will be ignored. To decrease time delay value, enter function #9 during open window

### Current supply/Battery change

**A series of signals during opening indicates that the battery is weak and must be replaced.**



To insert a battery, slide the cap off the unit as shown on the right. Remove used battery and connect one (1) fresh battery to the battery clip. Only use fresh **9V ALKALINE** batteries from brand name manufacturer: like DURACELL™. Align cap in the little track of the housing and slide back on. Be careful not to pinch the battery cable.

**Please recycle the old battery.**

